

H411101 TESSA SCONCE

ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE
 SHOUILD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

INSTALLATION

- STEP 1. Pull the wires out from the outlet box and install mounting plate onto the outlet box by using the (2) mounting screws.
 STEP 2. Fasten bare ground wire to ground wire from the wall outlet box (usually green or copper color) or connect ground wire
- step 3.
 to green screw on the mounting plate.
 Step 3.
 Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire nut and tightly wrap the wire nut with electrical tape.
- **STEP 4.** Repeat the previous step with the hot (black wires). Make sure there are no exposed wires or strands that could cause a dangerous short circuit.

DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

CLEANING

Please clean with a soft, dry cloth ONLY! Do not use cleaning products.

- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

FAILURE TO CONNECT THE APPROPRIATE WIRES CORRECTLY COULD RESULT IN SEROIUS INJURY OR DEATH!

- STEP 5.
 Carefully place connections back into the outlet box

 STEP 6.
 Place Back plate over the mounting plate and secure with set screws.

 Install the lamp(s). The fixture is rated for 60-watt type A lamp.

 DO NOT EXCEED RECOMMENDED WATTAGE!

 STEP 7.


 Restore power to the circuit at breaker or fuse-box.

provided by your local electrical distributor, home center, or hardware store.



H411101 TESSA SCONCE

ASSEMBLYANDMOUNTINGDIAGRAM

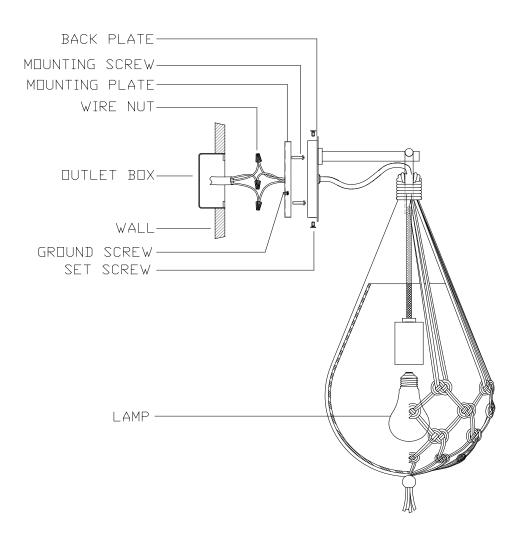

WIRE NUT/TAPINGDIAGRAM

ELECTRICAL TAPE APPROVED FASTNER (WIRE NUT)