DISTRICT

Collection:Pierce


Installation manual for:

LD6198BK D8"H9.8" L1

Installation instructions:

- 1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5.Insert screws (P4) in side of top unit the mounting bracket.
- 6.Put the canopy (P5) on the mounting bracket(P1) and use the screw(P6) to screw tighten.
- 7.Install E26 light source, no include bulb.

The end!

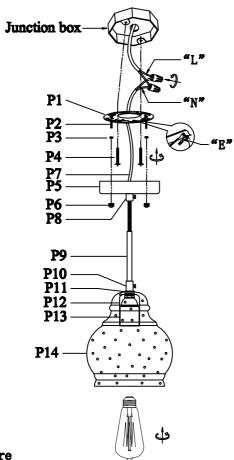

PARTS LIST

| part | picture | Description | Qty | Check list |
|------|------------|--------------------------|-----|------------|
| P1 | © | D4" Nounting bracket | 1 | |
| P2 | | 5/32-32 Screw | 2 | |
| P3 | () | Hex nut | 2 | |
| P4 | | 5/32-32 Screw | 2 | |
| P5 | | D4.75" Canopy plat | 1 | |
| P6 | D | Cap mut | 2 | |
| P7 | <u> </u> | Two-core Power Cord 5.6' | 1 | |
| P8 | | Cer iron perts | 1 | |
| P9 | | 1.4. 15"Tube | 1 | |
| P10 | | Coupling | 1 | |
| P11 | 0 | Rubber washer | 2 | |
| P12 | | R26 Socket | 1 | |
| P13 | | Socket cover | 1 | |
| P14 | D | DS'4LS.85' Glass shade | 1 | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

"L" = Hot wire

"N" = Neutral wire

"E" = Ground wire