

# Shade Installation Instructions

C51

Reach Floor Lamp 232860


Page 1 of 1

## To Install Shade (Figure 1)

### Component Parts

- A Fixture
- B Shade
- C Socket Ring
- D White Washer

1. Carefully unpack the fixture (A) from the carton.
2. Install shade (B) by sliding shade over socket followed by white washer (D).
3. Thread socket ring (C) on to socket and tighten against white washer (D). *Be careful not to over tighten.*

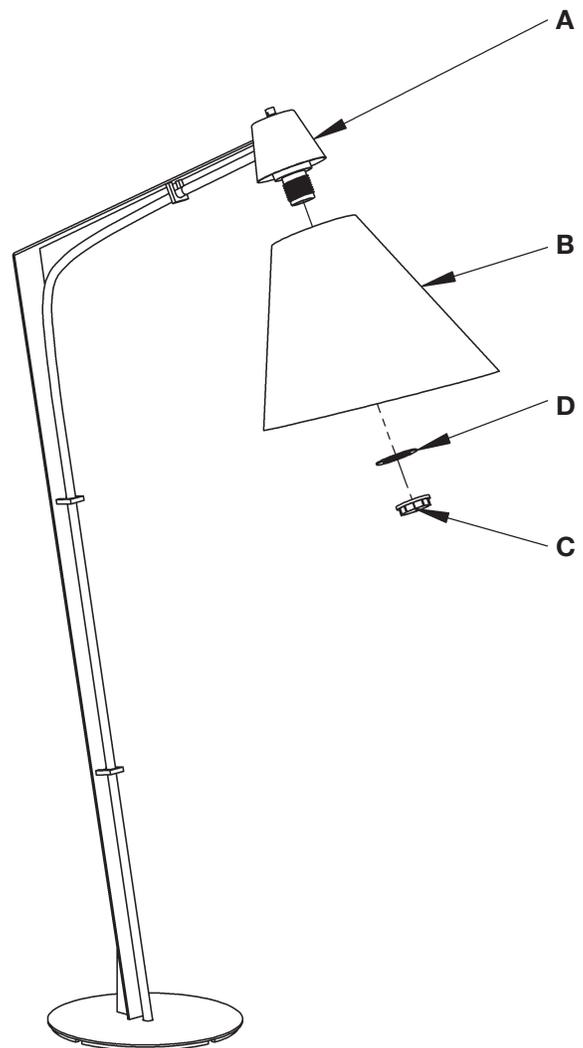

(Figure 1)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

**\* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**