


ASSEMBLY INSTRUCTIONS



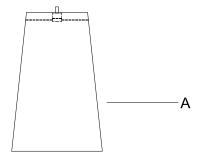



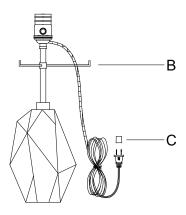

Item # KW 3012BM-AB

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- 1. Carefully remove all parts from the box.
- 2. Insert bulb (not included) into the socket.
- 3. Place shade (A) to the holder (B).
- 4. Remove protective plug cover (C) from the plug.
- 5. Plug into a proper electrical outlet and test the fixture.
- 6. Installation is complete.







^{***}Clean with a dry, soft cloth only. Do not use harsh abrasives or chemical agents.