


## INSTRUCTIONS


For Assembling and Installing Fixtures in Canada  
Pour L'assemblage et L'installation Au Canada

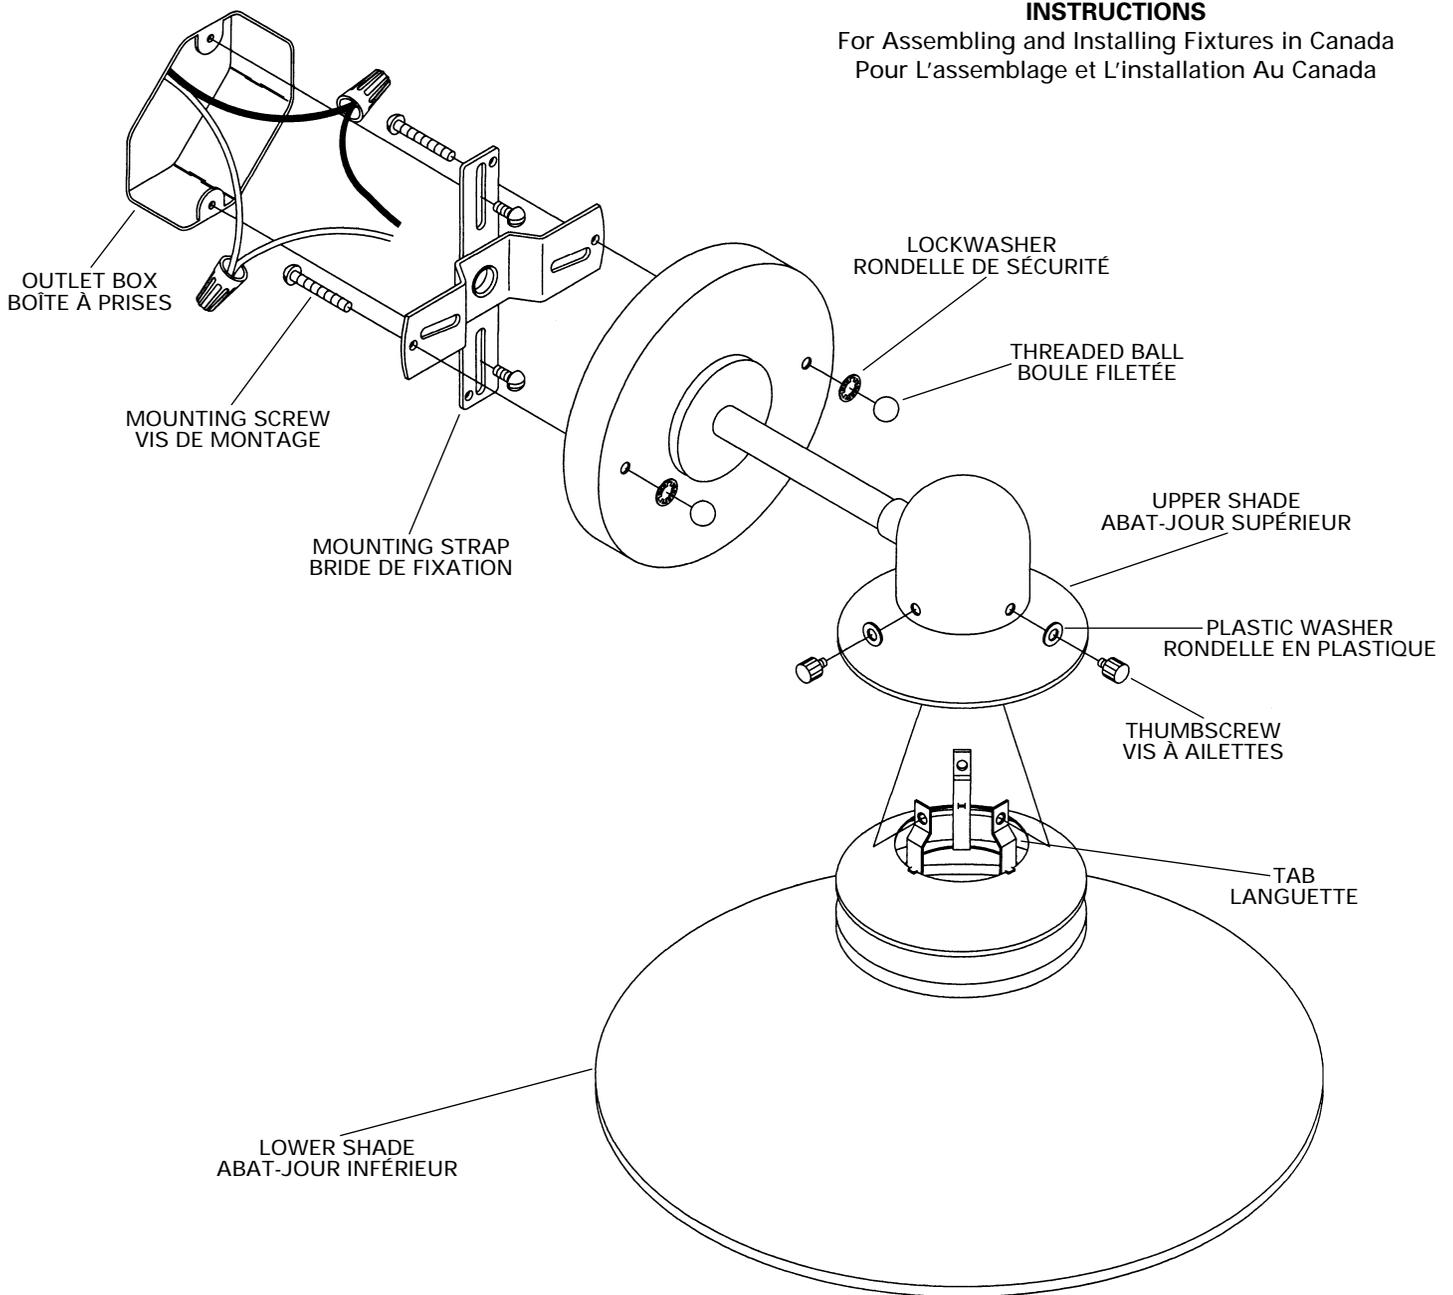

- 1) Turn off power.
- 2) Assemble mounting screws into threaded holes in mounting strap.
- 3) Attach mounting strap to outlet box. (Screws not provided)
- 4) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor


\*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



- 1) Couper l'alimentation secteur.
- 2) Monter les vis de vixation dans les trous filetés du collier de fixation.
- 3) Visser le collier de fixation à la boîte de jonction (vis non fournies).
- 4) Effectuer les raccordements électriques (les cosses ne sont pas fournies). Si les fils du lustre ne sont pas noir et blanc, se reporter au tableau ci-dessous pour effectuer les raccordements convenables et câbler en conséquence.

Connecter le fil noir ou rouge de la boîte	Connecter le fil blanc de la boîte
A Noir	A Blanc
*Au cordon parallèle (rond et lisse)	*Au cordon parallèle (à angles droits et strié)
Au transparent, doré, marron, ou noir sans fil distinctif	Au transparent, doré, marron, ou noir avec un til distinctif
Fil isolé (sauf fil vert) avec conducteur en cuivre	Fil isolé (sauf fil vert) avec conducteur en argent

\*Remarque: Avec emploi d'un fil parallèle (SPT I et SPT II). Le fil neutre est à angles droits ou strié et l'autre fil doit être rond ou lisse (Voir le schéma).



- 5) Push fixture to wall, carefully passing mounting screws through holes.
- 6) Tighten fixture to wall using threaded balls.
- 7) Slip tabs at top of lower shade into upper shade. If tabs do not go into upper shade easily, gently squeeze tabs inward.
- 8) Align holes in tabs with holes in upper shade.
- 9) Secure shades together using plastic washers and thumbscrews.

- 5) Pousser l'applique contre le mur, et faire passer les vis de fixation dans les trous de passage en procédant avec précautions.
- 6) Fixer l'applique contre le mur à l'aide des rondelles freins et des boules filetées.
- 7) Introduire les languettes situées sur la partie supérieure de l'abat-jour inférieur dans l'abat-jour supérieur. Appuyer légèrement si elles présentent une certaine résistance.
- 8) Faire correspondre les trous des languettes avec ceux de l'abat-jour supérieur.
- 9) Bloquer les abat-jour ensemble avec les rondelles en plastique et les vis à ailettes.