

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: LED 14W

Estimated Assembly Time: 20-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to ensure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Package Contents

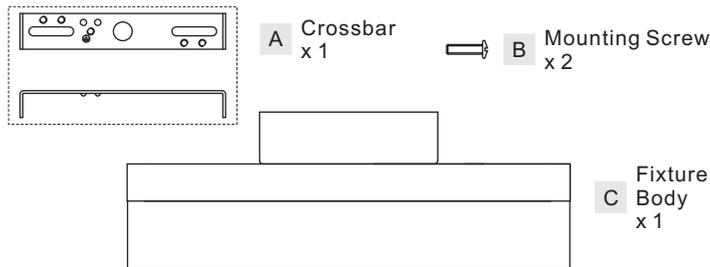

STEP 3 – Install the Fixture Body to Crossbar


- Thread Mounting Screws (B) into mounting holes on the side of the Crossbar (A). Do not thread all screws in.
- Carefully tuck all wires into the outlet box. Fit the “L” slots on the ceiling canopy with the Mounting Screws (B) and rotate the Fixture Body (C) until it is hung safely on Mounting Screws (B).
- By using screwdrivers, tighten Mounting Screws (B) until snug to secure the Fixture Body (C).

Your fixture is now assembled and ready to use. Enjoy!

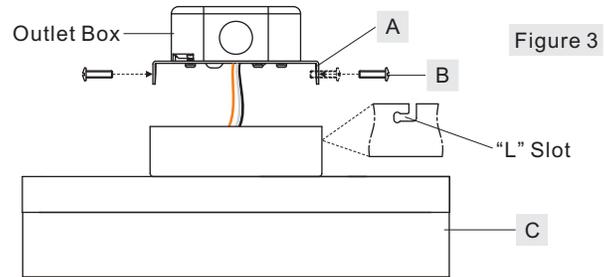


STEP 1 – Install the Crossbar to the junction box

- Attach the Crossbar (A) to the outlet box with the head of the green ground screw facing you. Secure it with outlet box screws (not included), tighten until snug.



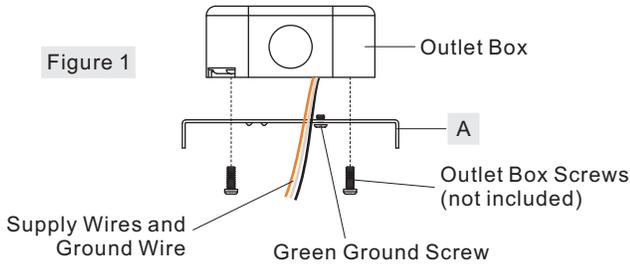


STEP 2 - Wire Connections

- Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

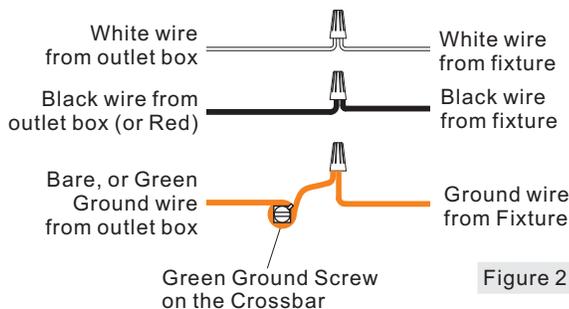

PCOH1608OI
FINISH: OIL RUBBED BRONZE

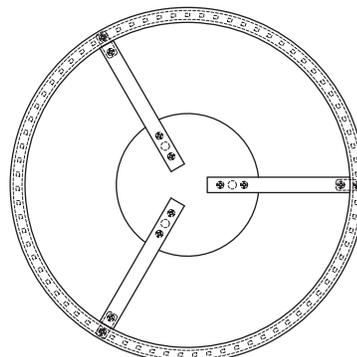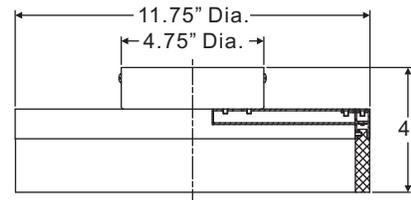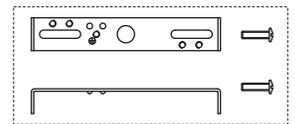

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"